


How to replace your Nessor Batteries

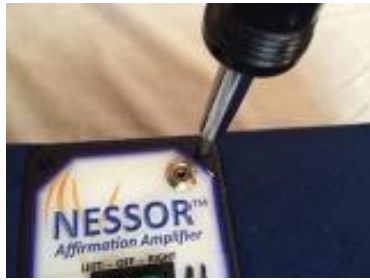

Step 1: Using a cruciform screwdriver remove the 4 screws from the small square box at the top of the Nessor.



Step 2: Carefully lift the top of the small square box and place it gently over the Nessor. Be careful not to pull or disconnect the wires.



Step 3: The batteries are in the rectangular black box. Slide the lid out and remove the 2 triple A batteries.



Step 4: After replacing the batteries close the battery box sliding the lid in and making sure it close completely.



Step 5: Place the square top back into its place in the Nessor and using the screwdriver tide gently the 4 screws.



Step 6. Test the Nessor pushing the green button to the right or to the left and check if the flashing light gets on.



***NOTE:* To extend the life of the batteries make sure that the Nessor is turned off at the end of the session. The Nessor is off when the green button is in the middle position.**